



skyBeacon™ STC

**Instructions for Continued
Airworthiness and
Maintenance Manual**



© 2018 uAvionix Corporation. All rights reserved.

uAvionix Corporation
300 Pine Needle Lane
Bigfork, MT 59911

<http://www.uavionix.com>

support@uavionix.com

Except as expressly provided herein, no part of this guide may be reproduced, transmitted, disseminated, downloaded or stored in any storage medium, for any purpose without the express written permission of uAvionix. uAvionix grants permissions to download a single copy of this guide onto an electronic storage medium to be viewed for personal use, provided that the complete text of this copyright notice is retained. Unauthorized commercial distribution of this manual or any revision hereto is strictly prohibited.

uAvionix® and Ping® are registered trademarks of uAvionix Corporation and may not be used without express permission of uAvionix.

skyBeacon, Continuous Calibration, Power Transcoder, Echo Installer, and Ping Installer are trademarks of uAvionix Corporation and may not be used without express permission of uAvionix.

skyBeacon technologies are patent pending.

1 Revision History

Revision	Date	Comments
A	11/27/2018	Initial release

2 Warnings / Disclaimers

All device operational procedures must be learned on the ground.

uAvionix is not liable for damages arising from the use or misuse of this product.

This equipment is classified by the United States Department of Commerce's Bureau of Industry and Security (BIS) as Export Control Classification Number (ECCN) 7A994.

These items are controlled by the U.S. Government and authorized for export only to the country of ultimate destination for use by the ultimate consignee or end-user(s) herein identified. They may not be resold, transferred, or otherwise disposed of, to any other country or to any person other than the authorized ultimate consignee or end-user(s), either in their original form or after being incorporated into other items, without first obtaining approval from the U.S. government or as otherwise authorized by U.S. law and regulations.

3 Limited Warranty

uAvionix products are warranted to be free from defects in material and workmanship for one year from the installation of skyBeacon on the aircraft. For the duration of the warranty period, uAvionix, at its sole option, will repair or replace any product which fails in normal use. Such repairs or replacement will be made at no charge to the customer for parts or labor, provided that the customer shall be responsible for any transportation cost.

Restrictions: This warranty does not apply to cosmetic damage, consumable parts, damage caused by accident, abuse, misuse, water, fire or flood, theft, damage caused by unauthorized servicing, or product that has been modified or altered.

Disclaimer of Warranty: IN NO EVENT, SHALL UAVIONIX BE LIABLE FOR ANY INCIDENTAL, SPECIAL, INDIRECT OR CONSEQUENTIAL DAMAGES, WHETHER RESULTING FROM THE USE, MISUSE OR INABILITY TO USE THE PRODUCT OR FROM DEFECTS IN THE PRODUCT. SOME STATES DO NOT ALLOW THE EXCLUSION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS MAY NOT APPLY TO YOU.

Warranty Service: Warranty repair service shall be provided directly by uAvionix. Proof of purchase for the product from uAvionix or authorized reseller is required to obtain and better expedite warrant service.

Please email or call uAvionix support with a description of the problem you are experiencing. Also, please provide the model, serial number, shipping address and a daytime contact number.

You will be promptly contacted with further troubleshooting steps or return instructions. It is recommended to use a shipping method with tracking and insurance.

4 Table of Contents

1	Revision History.....	3
2	Warnings / Disclaimers	4
3	Limited Warranty.....	5
5	Introduction.....	8
5.1	Publications	8
5.2	Revision and Distribution	8
5.3	Acronyms and Abbreviations	8
6	System Description.....	10
6.1	Features and Installation.....	10
6.2	Interfaces	11
7	Control and Operation	11
8	Instructions for Continued Airworthiness.....	12
8.1	Airworthiness Limitations	12
8.2	Servicing Information	12
8.2.1	On-Condition Servicing.....	12
8.2.2	Special Tools.....	12
8.3	Maintenance Intervals.....	13
8.4	Visual Inspection.....	14
8.4.1	skyBeacon Visual Inspection	14
8.4.2	LED Visual Inspection	14
8.5	Post Lightning Strike Inspection.....	14
8.6	Altitude Encoder Testing.....	15
8.6.1	Altitude Encoder Correspondence Test.....	15
9	Post-Installation Test Procedures	16
10	Troubleshooting.....	16
11	Return to Service Procedure.....	17
11.1	Maintenance Records.....	17

12 Support.....	18
Appendix A – Installation Record	19

5 Introduction

This document provides Instructions for Continued Airworthiness (ICA) and Maintenance Manual (MM) for the skyBeacon UAT transmitter as installed under STC SA04362CH. This document satisfies the requirements for continued airworthiness as defined by 14 CFR Part 23.1529 and Appendix A. Information in this document is required to maintain the continued airworthiness of the skyBeacon UAT transmitter.

5.1 Publications

When performing skyBeacon system maintenance it is recommended the following documents are available.

Part Number	uAvionix Document
UAV-1001421-001 Rev D	skyBeacon TSO User and Installation Guide
UAV-1002304-001 Rev C	skyBeacon STC Installation Manual
UAV-1002111-001 Rev A	skyBeacon Flight Manual Supplement

5.2 Revision and Distribution

This document is required for maintaining the continued airworthiness of the aircraft. When this document is revised, every page will be revised to indicate current revision level.

Owner/operators may obtain the latest revision of this document at www.uavionix.com or by contacting a uAvionix dealer. They may also register for updates and support at www.uavionix.com.

5.3 Acronyms and Abbreviations

The following acronyms may be used in this document:

ADS-B	Automatic Dependent Surveillance Broadcast
AML	Approved Model List
ATC	Air Traffic Control
CFR	Code of Federal Regulations
FCC	Federal Communications Commission
FAA	Federal Aviation Administration
GPS	Global Positioning System
ICA	Instructions for Continued Airworthiness

ICAO	International Civil Aviation Organization
IFR	Instrument Flight Rules
LED	Light Emitting Diode
MM	Maintenance Manual
RTCA	Radio Technical Commission for Aeronautics
SBAS	Satellite Based Augmentation System
STC	Supplemental Type Certificate
TSO	Technical Standard Order
VFR	Visual Flight Rules
WAAS	Wide Area Augmentation System
UAT	Universal Access Transceiver

6 System Description

6.1 Features and Installation


skyBeacon is a wing-tip mounted unit that meets all of the requirements for compliance to 14 CFR Part 91.225 as follows:

- 978 MHz UAT transmitter
- Power line transcoder used to obtain installed Mode A/C transponder information including squawk code, IDENT, and altitude data
- GPS/SBAS receiver that provides the WAAS position source used for the ownship ADS-B data
- Barometric pressure sensor and altitude encoder that continuously calibrates itself to the Mode A/C transponder's installed altitude encoder
- LED red position light
- LED white anti-collision light
- LED status light that provides indication of proper operation

This device transmits ownship Automatic Dependent Surveillance-Broadcast (ADS-B) data through the UAT data link.

skyBeacon replaces an existing left wing-tip (red) position light. It must be installed as shown in the *skyBeacon STC Installation Manual*.

6.2 Interfaces

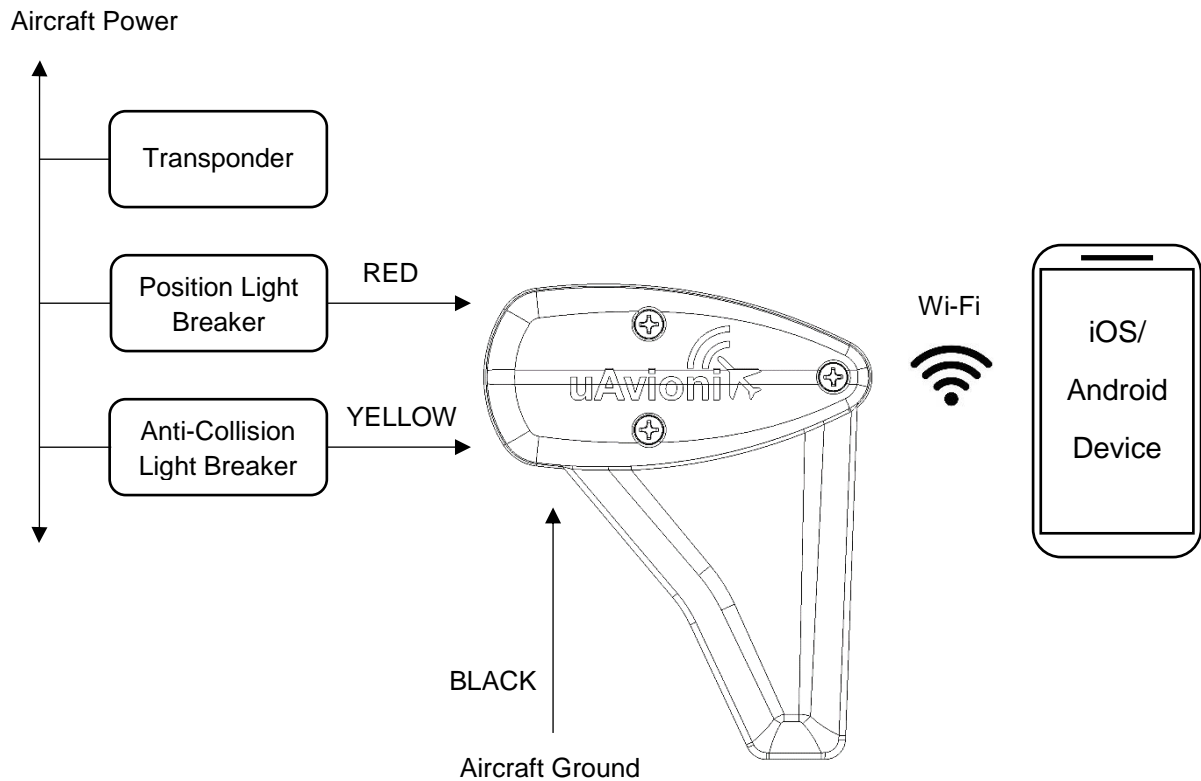

7 Control and Operation

During normal operation, the pilot has no direct interface or control of the skyBeacon except for activating using the Position Light switch. Primary user interface controls are provided by the aircraft's existing transponder, including selection of Mode A squawk code and IDENT. skyBeacon also includes an annunciator LED that may or may not be visible in flight, providing non-required information.

Refer to *skyBeacon Flight Manual Supplement* for control and operation information.

8 Instructions for Continued Airworthiness

This section provides Instructions for Continued Airworthiness of the skyBeacon system as installed under STC SA04362CH and satisfies the requirements for continued airworthiness as defined by 14 CFR Part 23.1529 and Part 23 Appendix A.

8.1 Airworthiness Limitations

The Airworthiness Limitations section is FAA-approved and specifies maintenance required under 14 CFR Part 43.16 and 14 CFR Part 91.403 of the Federal Aviation Regulations unless an alternative program has been FAA-approved.

There are no new or additional airworthiness limitations associated with this equipment and/or installation.

8.2 Servicing Information

The skyBeacon unit maintenance is 'on condition' only. See User and Installation Guide (reference Section 5.1) for equipment removal and installation. No component-level overhaul is required.

8.2.1 On-Condition Servicing

On Condition replacement and/or servicing may be required when conditions, symptoms, and/or servicing should take place only after the system is troubleshot based on guidance provided in this manual and per common avionics maintenance practices.

8.2.2 Special Tools

The following tools are needed to perform maintenance tasks.

- Ground power source (capable of supplying sufficient power to the aircraft systems and avionics)
- iOS or Android Mobile Device with "uAvionix skyBeacon Installer" App
- Dark glasses for viewing LEDs directly at close range
- Optional or as required: Transponder ramp test set

8.3 Maintenance Intervals

Periodic checks of the skyBeacon system installed by the STC referenced in Section 5 are specified in Table 8-1 at specific intervals.

Table 8-1 Maintenance Intervals

Item	Description/Procedure	Section No.	Interval
Equipment Removal and Replacement	Removal and installation of the skyBeacon unit	See <i>skyBeacon User and Installation Guide</i> Section 7	On Condition
Equipment Visual Inspection	Conduct a visual check of the skyBeacon unit, and associated wiring to ensure continued installation integrity	8.4	12 Calendar Months
Lightning Strike – Actual or Suspected	Inspect the wired connections, skyBeacon unit, and surrounding areas.	8.5	On Condition
Testing	The skyBeacon must be tested and shown to comply with Title 14 CFR Part 91.227		Installation, software update, or replacement of skyBeacon
Altitude encoder testing, for VFR operations	Ensure a recent “Last Calibration” Date	See <i>skyBeacon User and Installation Guide</i> Section 10.4	12 Calendar Months
Altitude encoder testing, for IFR operations in controlled airspace	Altitude encoder tested and found to comply with Part 43 Appendix E Section (c)	8.6	In accordance with 14 CFR Part 91.411 and Part 43 Appendix E Section (c)

8.4 Visual Inspection

Perform a visual inspection as detailed in this section. Check skyBeacon system components for damage or other defects and replace as required. Inspection may require the temporary removal of a unit to gain access to connectors. Follow guidance in User and Installation Guide for equipment removal and replacement. Refer to model specific Aircraft Maintenance Manual for instructions on removing access panels or covers, as required.

8.4.1 skyBeacon Visual Inspection

- Inspect the skyBeacon unit and verify it is securely mounted.
- Inspect the unit fasteners and verify they are properly torqued and show no wear or damage. Additionally –
 - Verify unit support structure is in good condition and its integrity is not compromised.
 - Inspect for corrosion and treat as required.
- Inspect the condition of the wiring.
 - Verify that all wiring and cables are securely fastened.
 - Verify that the harness shows no signs of cracking, chafing, abrasion, melting, or any other form of damage.
 - Inspect the skyBeacon connectors for corrosion, evidence of moisture, or other defects.
- Confirm operation of the on-device failure annunciator.

8.4.2 LED Visual Inspection

The forward position light is designed with 3 red LEDs. The anti-collision light is designed with 4 white LEDs. If any one LED fails, the unit must be repaired or replaced.

Note: Use dark glasses or cover the device to ensure eye safety during LED inspection.

8.5 Post Lightning Strike Inspection

Inspection of the skyBeacon unit must be performed following a suspected or actual lightning strike. The skyBeacon and nearby aircraft structure and cabling must be inspected to verify no damage has occurred where lightning may have attached. A skyBeacon with visible signs of damage

should be replaced. Grounding hardware and nearby aircraft structure supporting skyBeacon installation must be inspected for damage. Repair any damaged components.

8.6 Altitude Encoder Testing

The internal skyBeacon altitude encoder is designed to stay in Continuous Calibration™. For IFR operations in controlled airspace, the encoder must meet the requirements of 14 CFR Part 91.411, having been tested and inspected and found to comply with Part 43 Appendix E Section (c).

The difference between the reported pressure altitude and the altitude displayed on the Primary Flight Altimeter shall not exceed 125 feet. Continuous Calibration™ ensures the altitude reported by skyBeacon matches what is being reported by your transponder altitude encoder.

Note: If your transponder altitude encoder has been recently adjusted, a VFR flight may be necessary to achieve proper correspondence. Your Primary Flight Altimeter must have been previously tested as required by Part 43 Appendix E.

8.6.1 Altitude Encoder Correspondence Test

- Ensure transponder is turned OFF
- Set the primary flight altimeter to 29.92 inches of mercury
- Turn on the skyBeacon
- Open the “uAvionix skyBeacon Installer” as detailed in *skyBeacon User and Installation Guide* Section 10
- Connect to skyBeacon
- Select the Monitor screen
- View the reported Pressure Altitude and ensure correspondence ± 125 feet of the Primary Flight Altimeter

9 Post-Installation Test Procedures

Procedures that must be completed when the skyBeacon is removed and re-installed or replaced with a new unit are detailed in this section.

Refer to *skyBeacon User and Installation Guide* Section 10.3 for Post-Installation Checks.

If no other service is to be performed, continue to the return-to-service procedure in Section 10.

10 Troubleshooting

This section provides troubleshooting information to assist if problems occur after maintenance activities.

Table 10-1 Troubleshooting Actions

Problem / Indication	Cause	Action
Unable to see Beacon-XXXX Wi-Fi network	<ul style="list-style-type: none">• Device not receiving power	<ul style="list-style-type: none">• Ensure circuit breaker is closed, navigation light switch is on and wiring is correct
Position light not functioning	<ul style="list-style-type: none">• Device not receiving power• Position light disabled in configuration• Voltage less than 11 volts	<ul style="list-style-type: none">• Ensure circuit breaker is closed, navigation light switch is on and wiring to red and black wires are correct• Ensure position light is enabled in configuration• Ensure system voltage greater than 11 volts (may require the engine to be running)

Strobe light not functioning	<ul style="list-style-type: none"> • Strobe not receiving power • Anti-collision strobe disabled in configuration • Voltage less than 11 volts 	<ul style="list-style-type: none"> • Ensure circuit breaker is closed, anti-collision strobe switch is on and wiring to yellow and black wires are correct • Ensure anti-collision strobe is enabled in app configuration • Ensure system voltage is greater than 11 volts (may require the engine to be running)
Invalid configuration - Annunciator LED constant On and configuration error indicated in app	<ul style="list-style-type: none"> • Invalid ICAO address configuration • Transmit disabled 	<ul style="list-style-type: none"> • Configure a valid ICAO address using the installer app • Ensure transmit is enabled in app configuration
Position fault - Annunciator LED blinking On/Off and no position shown in app	<ul style="list-style-type: none"> • No GPS position available 	<ul style="list-style-type: none"> • Ensure device has a clear view of the sky • Allow GPS up to 15 minutes to obtain position
Other fault - Annunciator LED blinking or constant On and other error indicated in app	<ul style="list-style-type: none"> • Internal fault or other configuration issue 	<ul style="list-style-type: none"> • Contact uAvionix

11 Return to Service Procedure

After removing and re-installing or replacing the skyBeacon, perform the system configuration procedures in the *skyBeacon User and Installation Guide* Section 10.

11.1 Maintenance Records

After conducting the required return-to-service procedures in accordance with this document, the aircraft may be returned to service.

Record the following information in the appropriate aircraft maintenance logs.

- Part number and serial number of the unit that was replaced or re-installed.
- Any other applicable information related to the maintenance work performed on the aircraft.

Appendix A includes an installation record that should be completed and updated as appropriate with every maintenance action.

12 Support

For additional questions or support please visit:

<http://www.uavionix.com/support/>

Appendix A – Installation Record

A copy of this appendix must be used to record installation information and must be kept in the aircraft permanent records.

skyBeacon Installation and Configuration Log

Date:	By:
Aircraft Information	
Make:	Model:
Serial Number:	Registration Number:
skyBeacon Information	
Serial Number:	Wi-Fi SSID:
skyBeacon Configuration	
Transmit Enabled: <input type="checkbox"/> On <input type="checkbox"/> Off	Anonymous Mode: <input type="checkbox"/> On <input type="checkbox"/> Off
Call Sign:	ICAO Number (hex):
V _{SO} (knots):	ADS-B In Capability: <input type="checkbox"/> 978 <input type="checkbox"/> 1090
Position Light: <input type="checkbox"/> On <input type="checkbox"/> Off	Anti-collision Light: <input type="checkbox"/> On <input type="checkbox"/> Off
Emitter Type:	Transponder Mon. Threshold:
Aircraft Length:	Aircraft Width:
GPS Antenna Offset (Lat):	GPS Antenna Offset (Lon):